

HUMP YARD PURVEYANCE


245 RAVEN LN ROSEBURG OR 97470-9789
(541) 957-5526

www.humpyard.com

e-MAIL howard@humpyard.com

REMOTE TURNOUT LEVER BASIC ASSEMBLY

SEE OTHER PAGES FOR MOUNTING CONFIGURATIONS

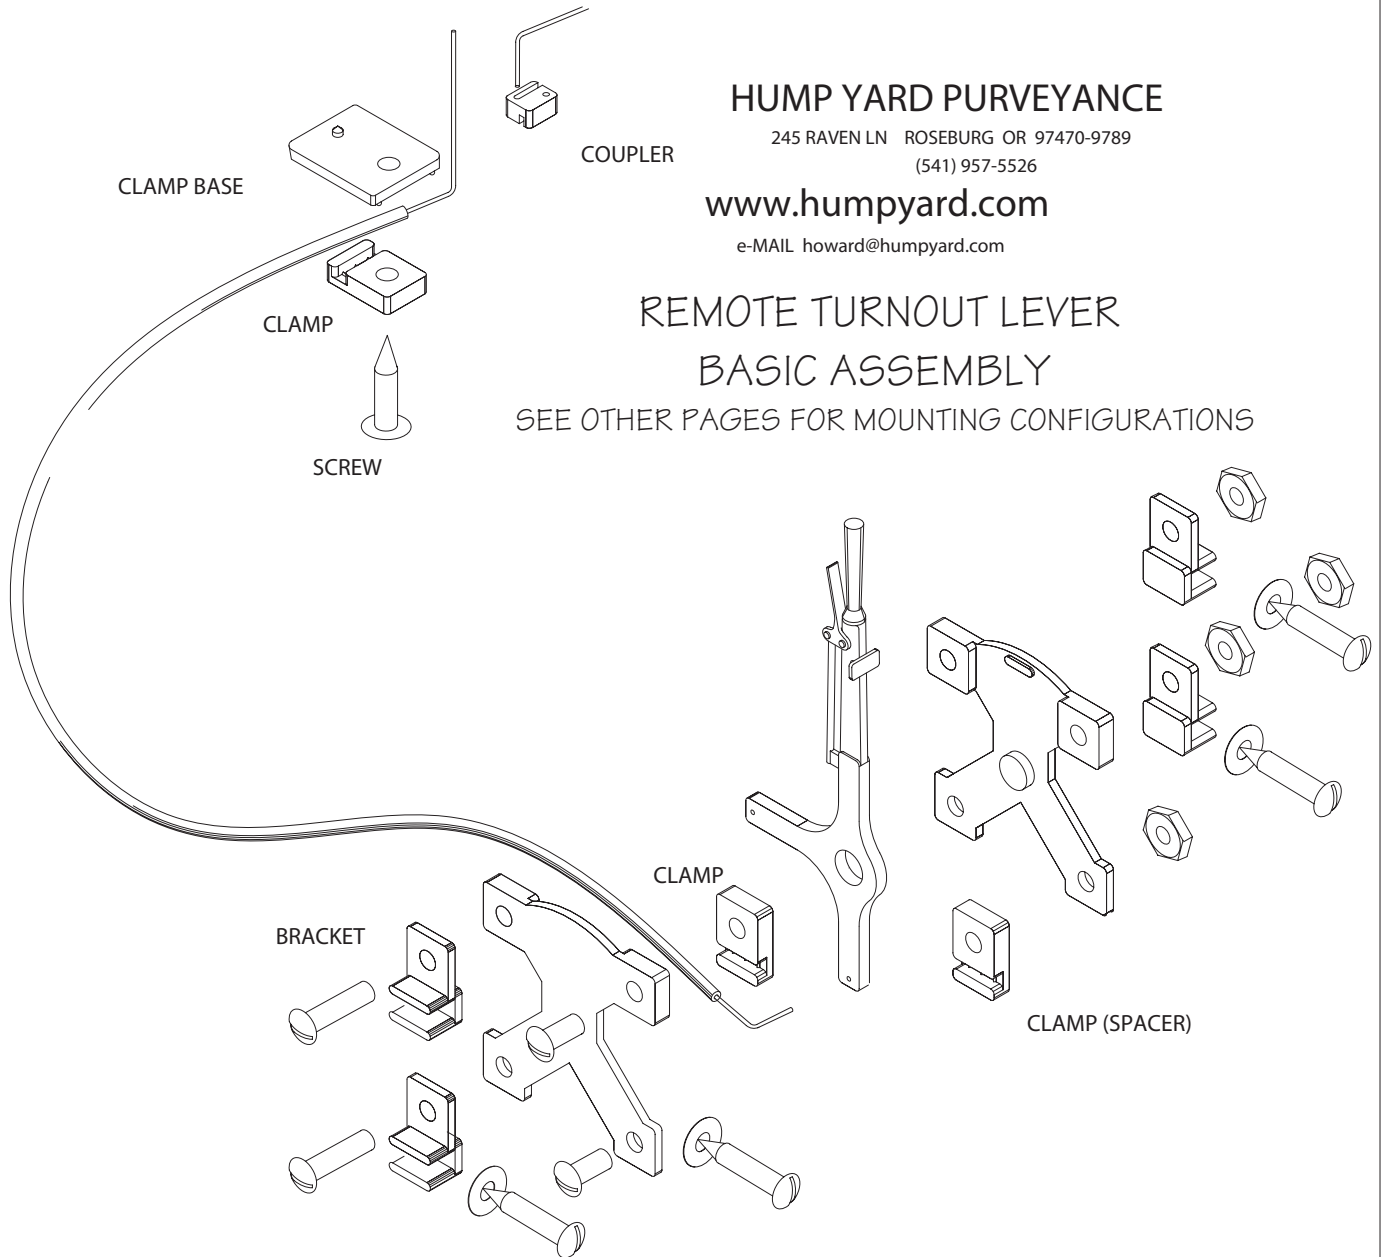

2 DIFFERENT HOLE PATTERNS FOR MOUNTING ARE SHOWN
(1 1/4" SLOT AND THE 1/8" Ø HOLES ARE NOT ALLWAYS NEEDED)
USE AWL TO TRANSFER HOLE PATTERN TO MOUNTING SURFACE
TURN PATTERN UPSIDE DOWN FOR HORIZONTAL SURFACE MOUNTING
(1 1/4" SLOT USED ONLY FOR SUBSURFACE MOUNTING)

